





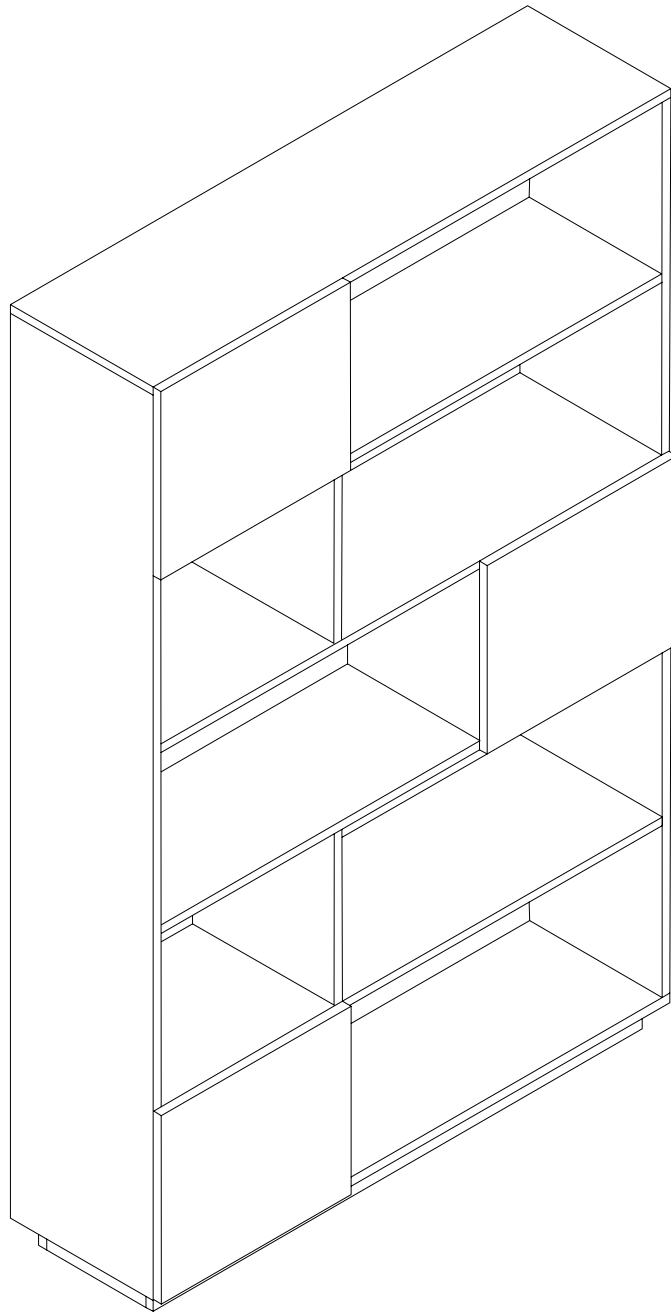





KENAY

BORNA ESTANTERÍA /
BORNA BOOKCASE



KSH-0006




PIEZAS / PIECES

A x 33 	B x 32 	C x 33 	D x 49 	E x 18 
F x 1 	H x 1 	I 1 x 6 	Q x 20 	

HERRAMIENTAS / TOOLS


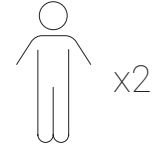



PARTES / PARTS



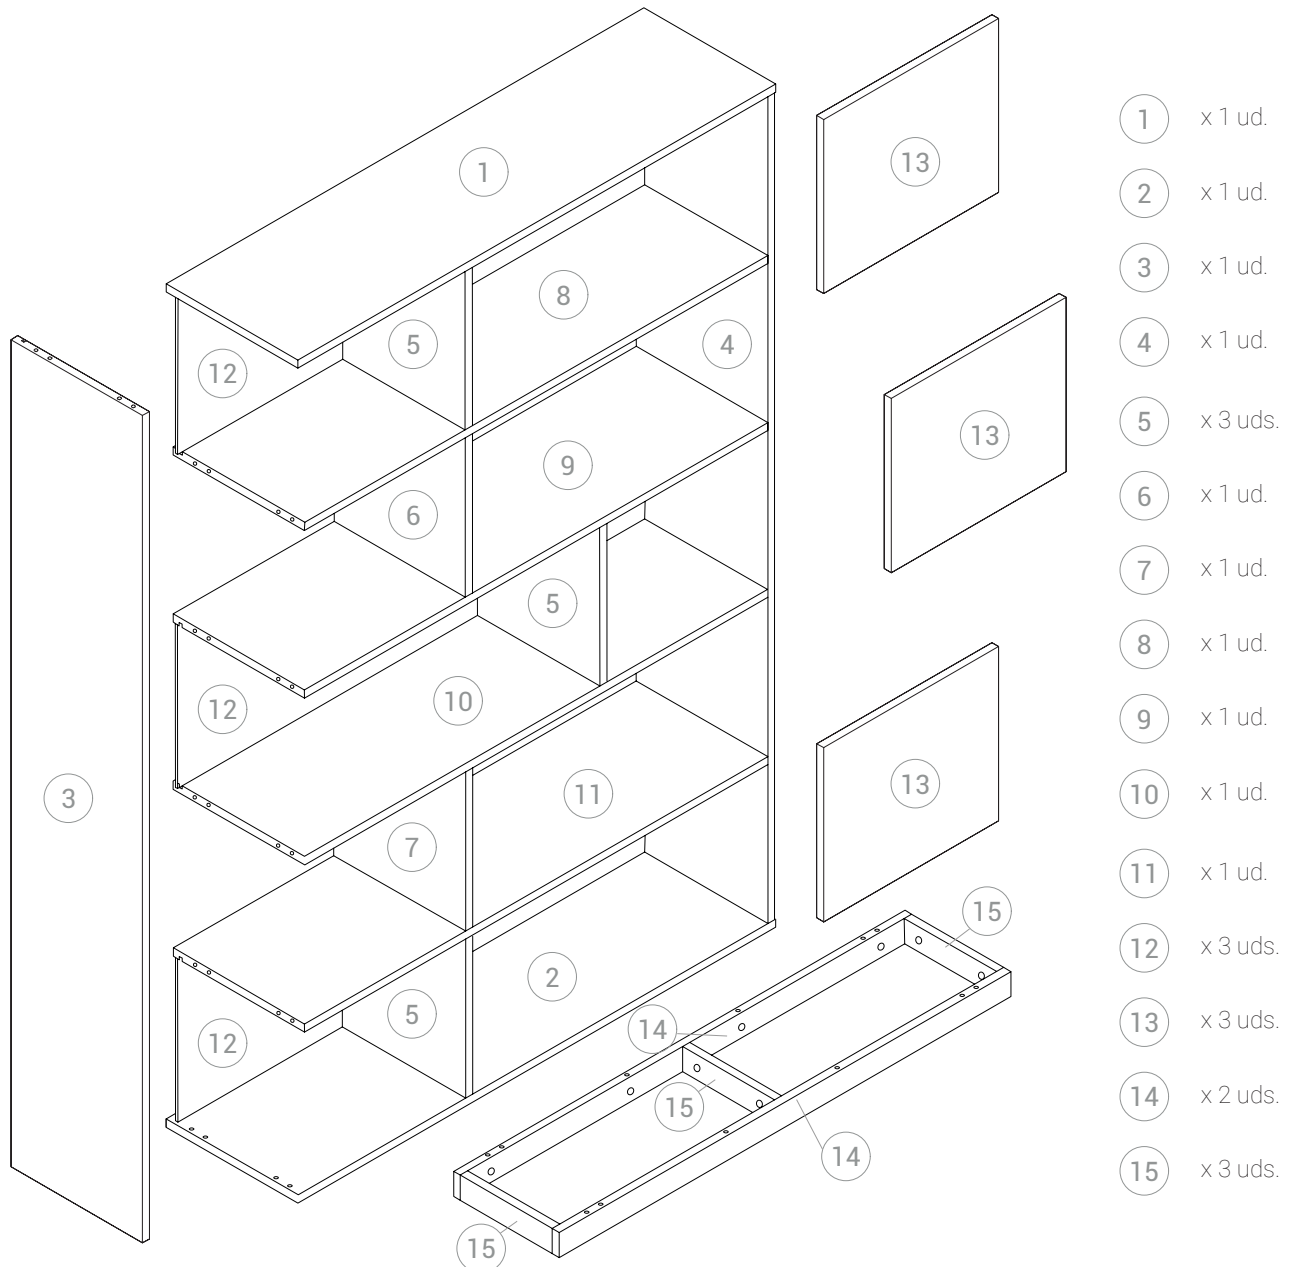


PASO 1 / STEP 1



PASO 1.1 / STEP 1.1

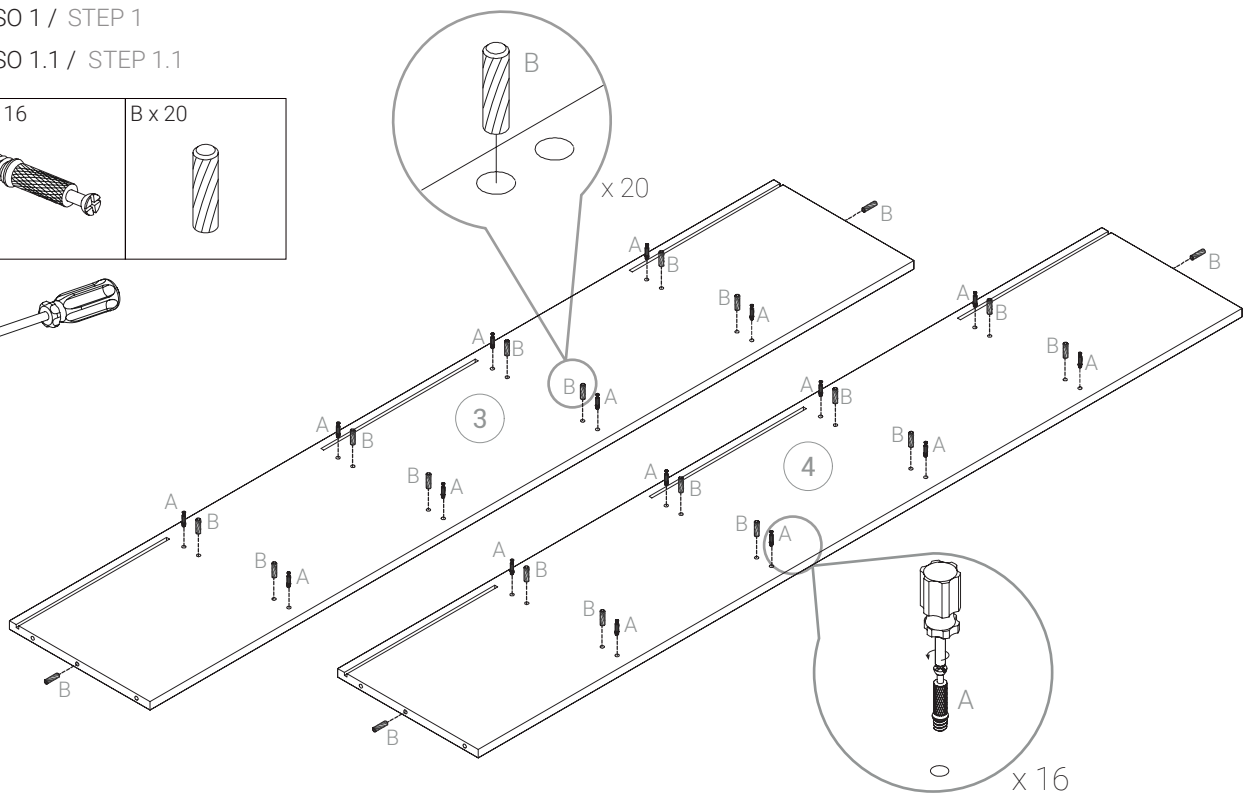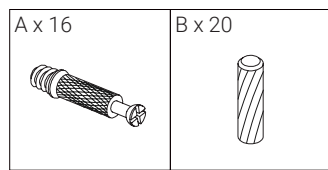





PASO 1.2 / STEP 1.2

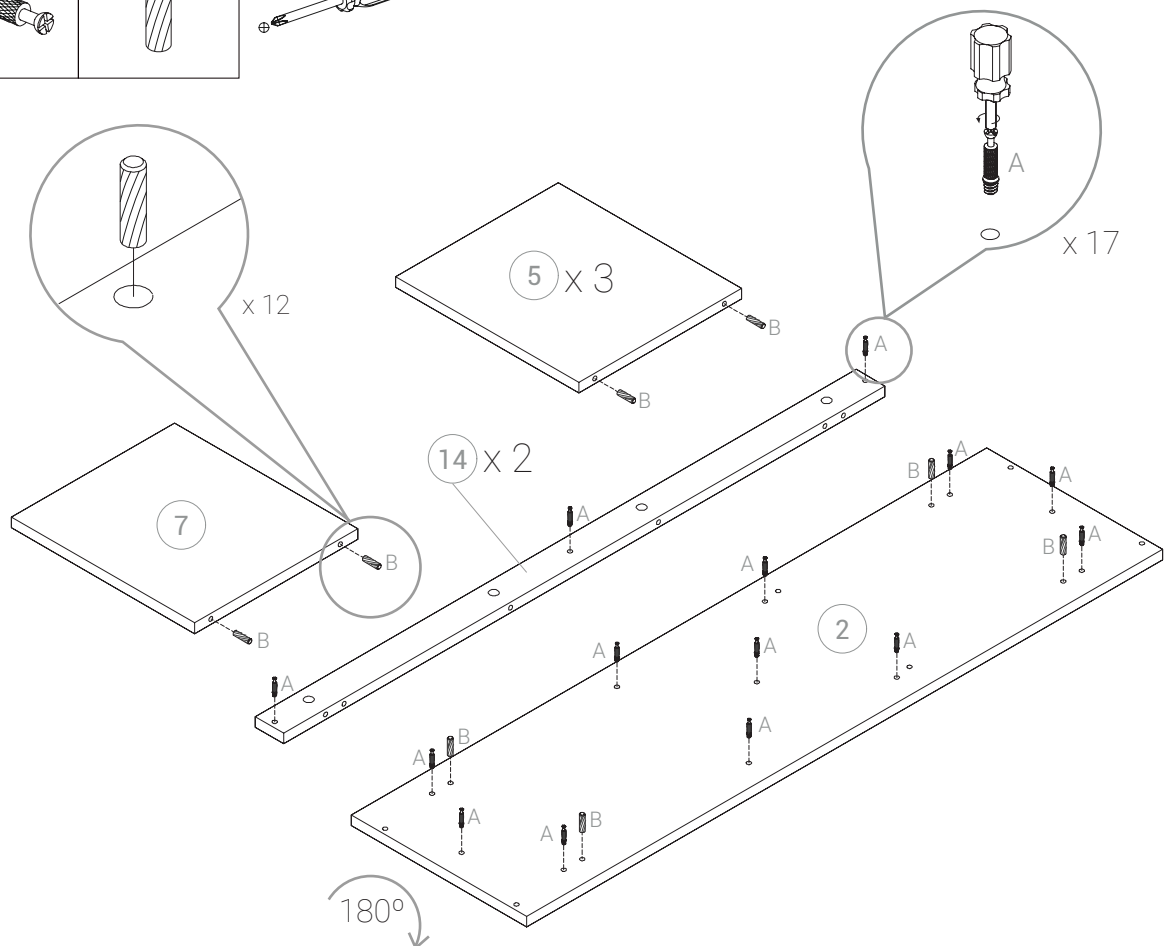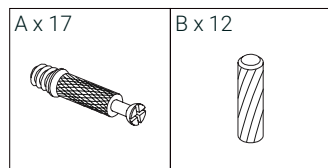

PASO 2 / STEP 2



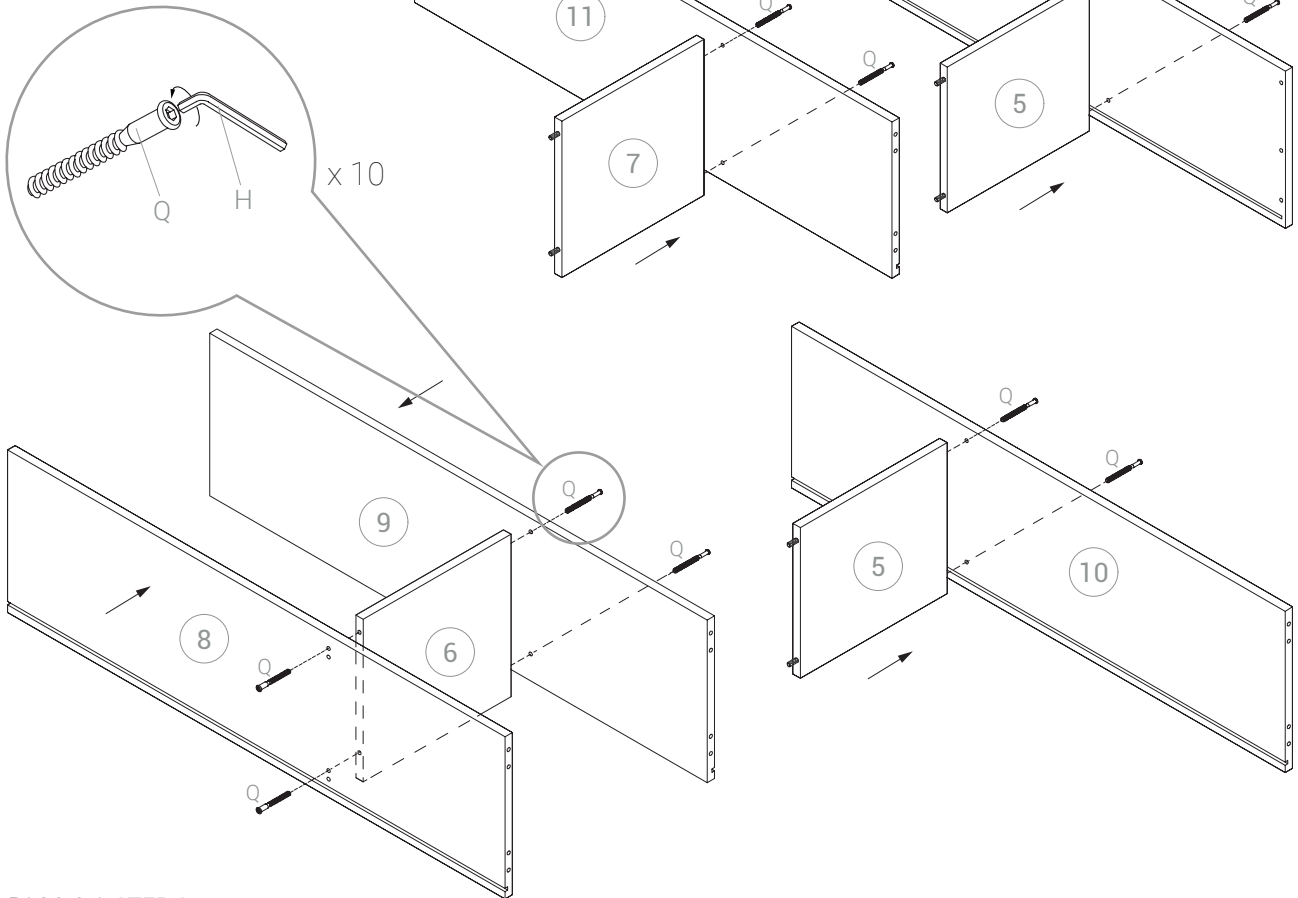
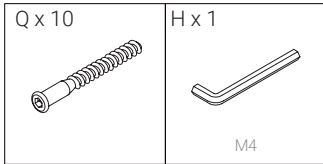


PASO 3 / STEP 3

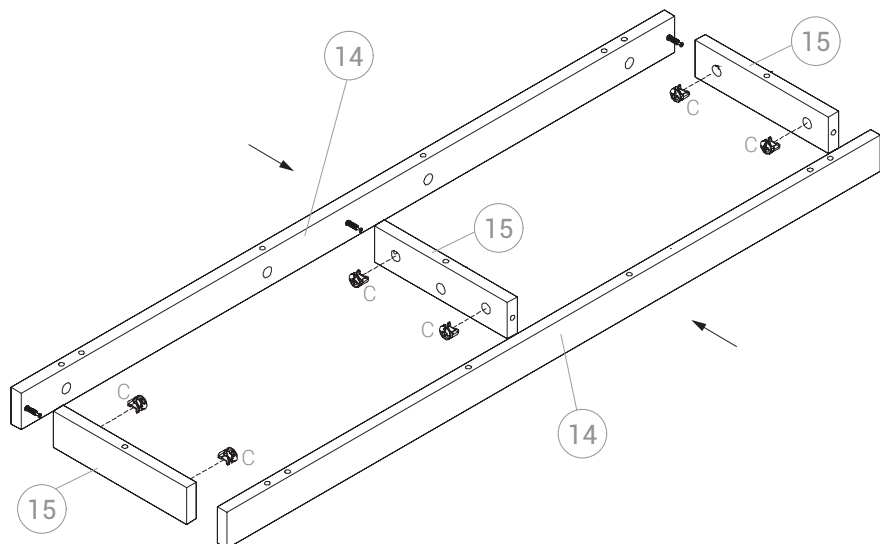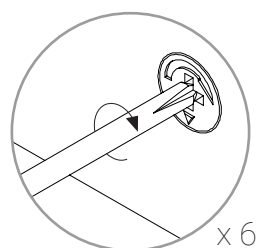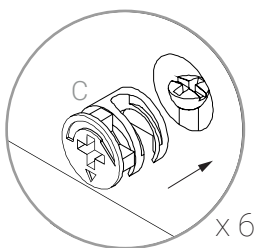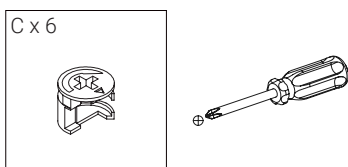


PASO 4 / STEP 4

C x 11

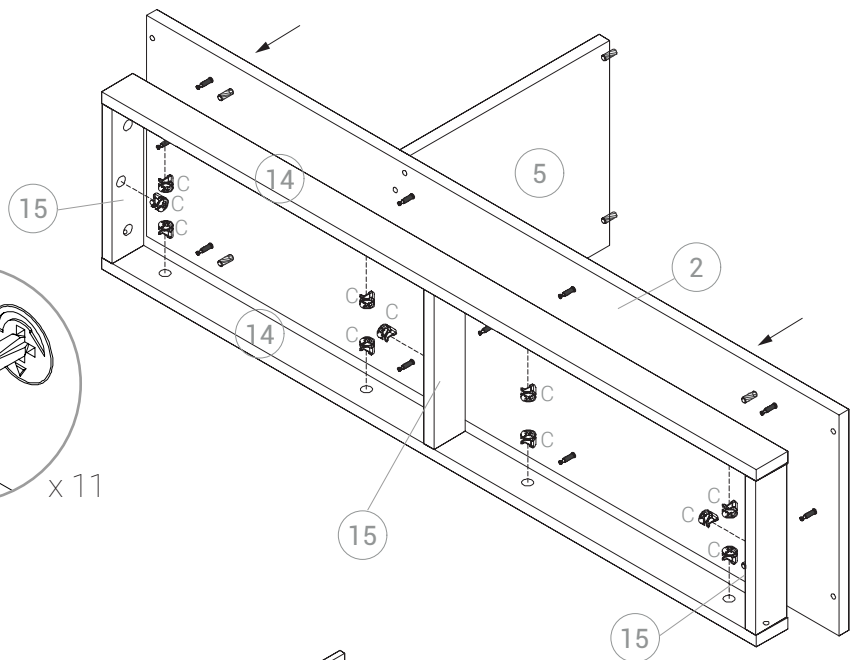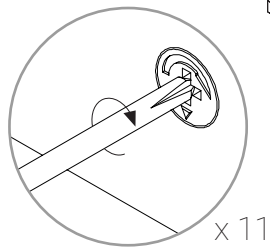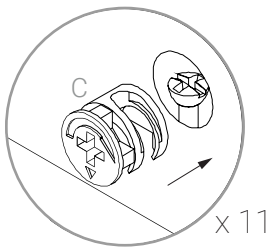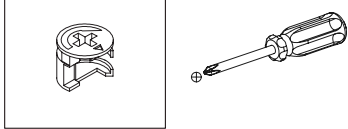





PASO 5 / STEP 5

PASO 5.1 / STEP 5.1

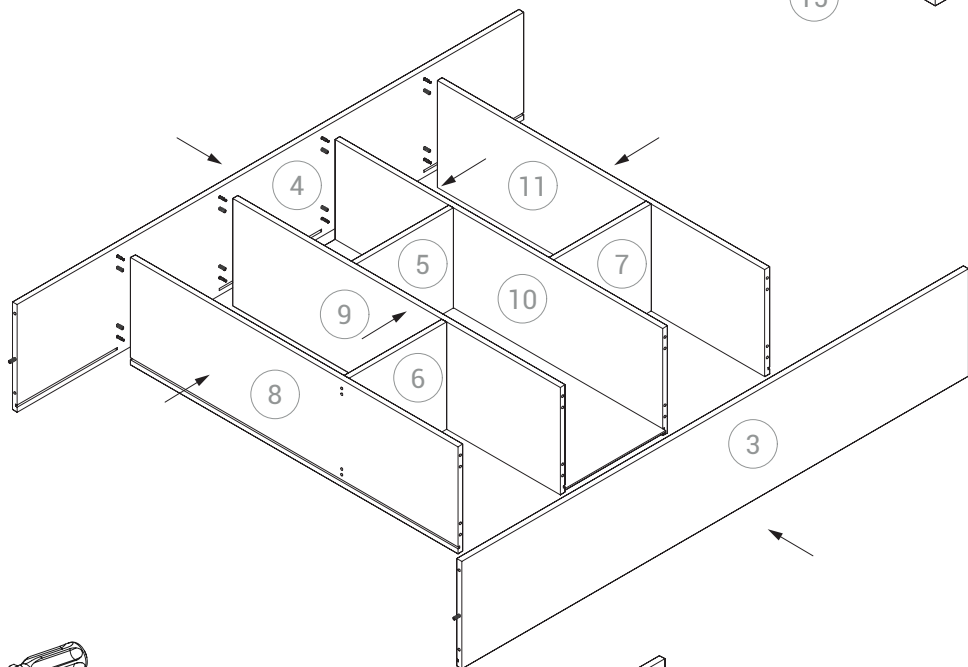


PASO 5.2 / STEP 5.2

C x 16

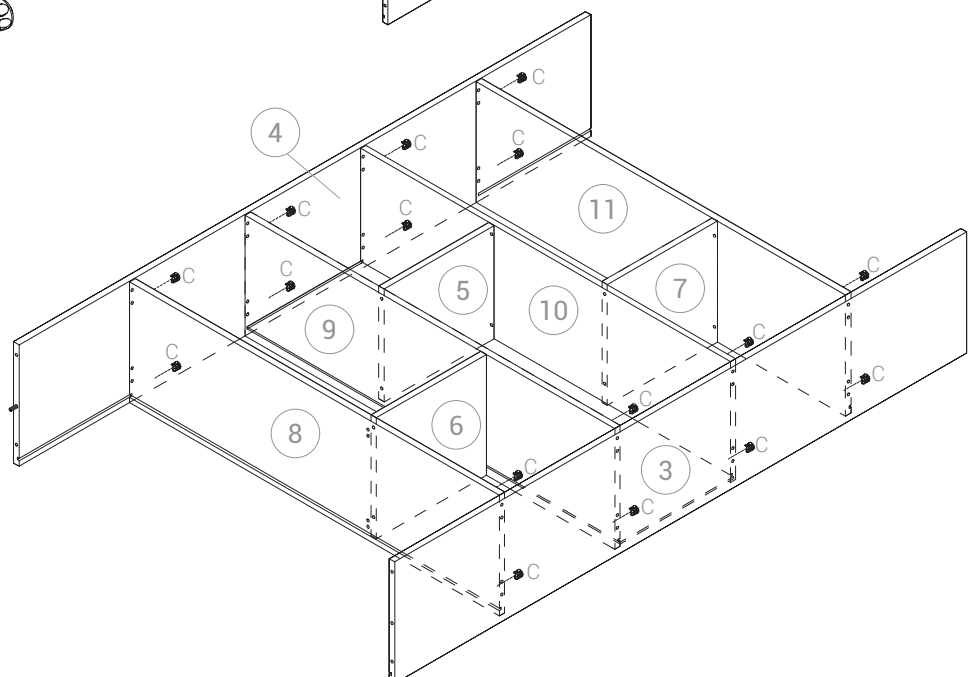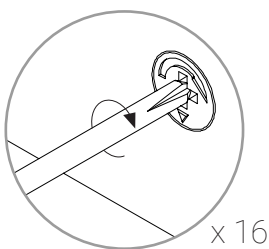
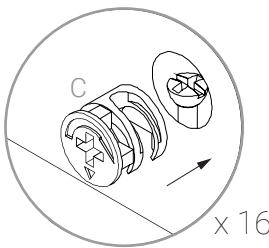
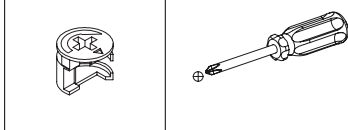


PASO 6 / STEP 6


PASO 6.1 / STEP 6.1

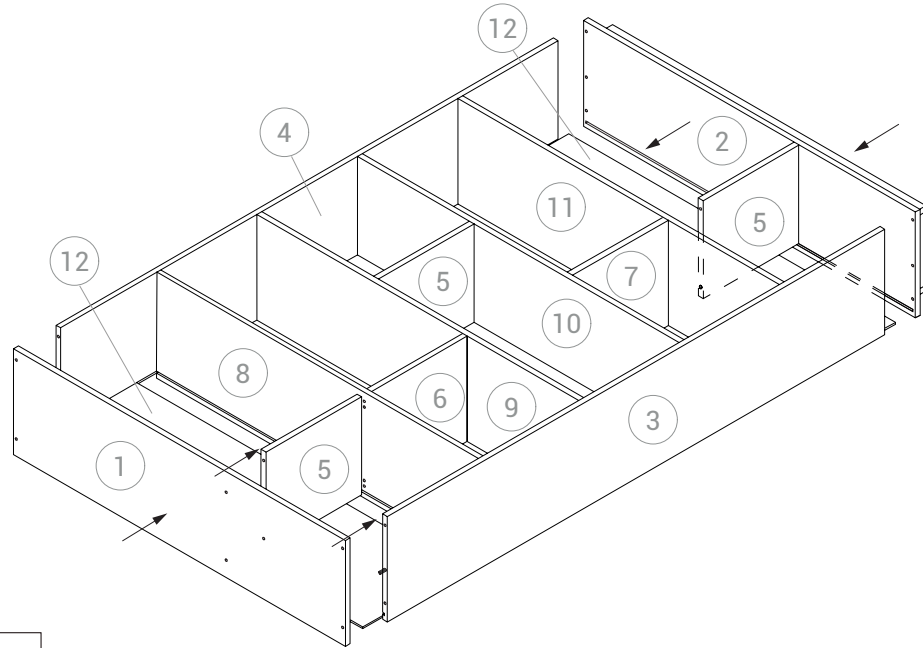



PASO 6.2 / STEP 6.2

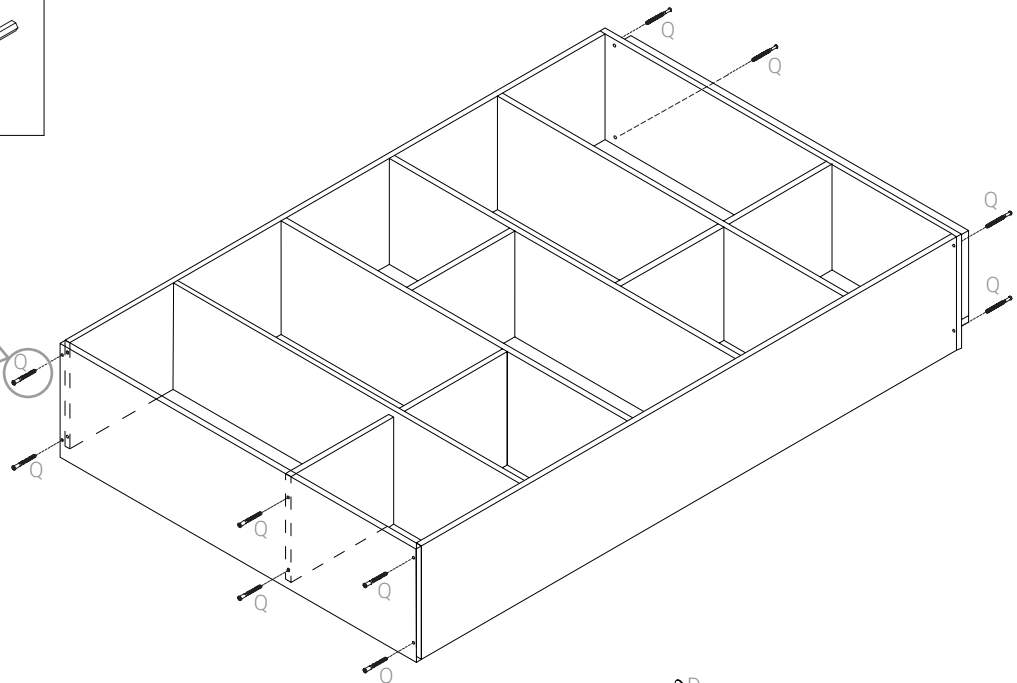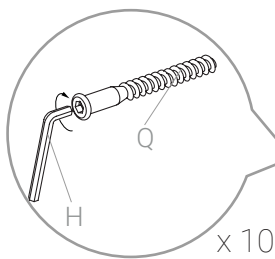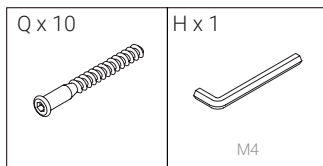




PASO 7 / STEP 7

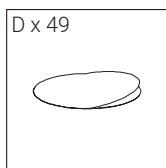

PASO 7.1 / STEP 7.1

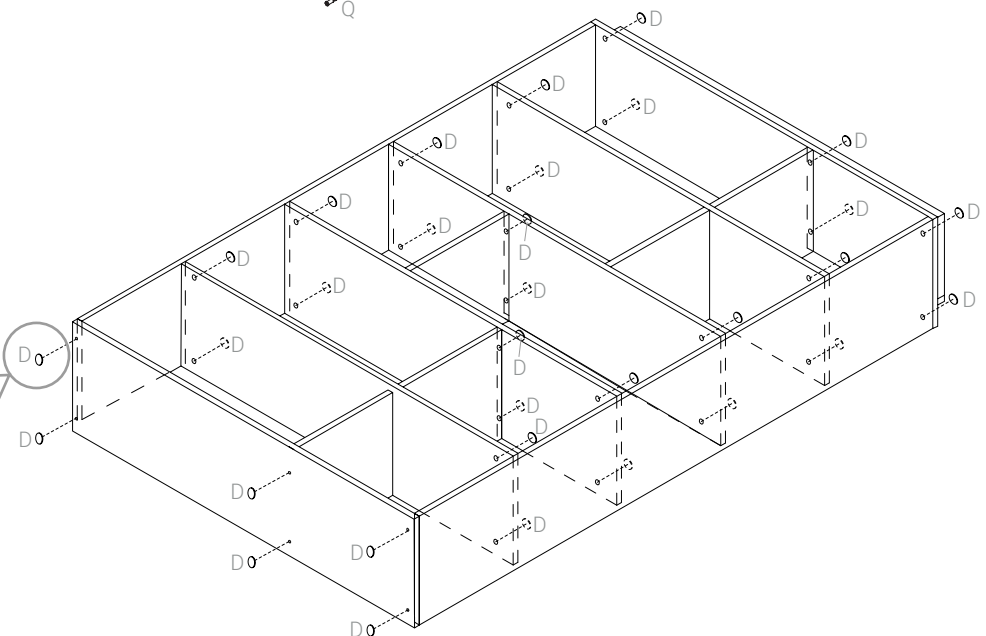
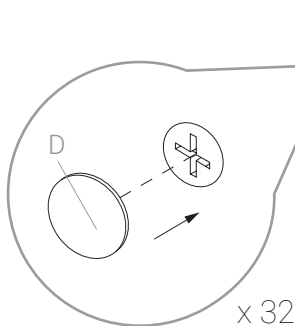


PASO 7.2 / STEP 7.2

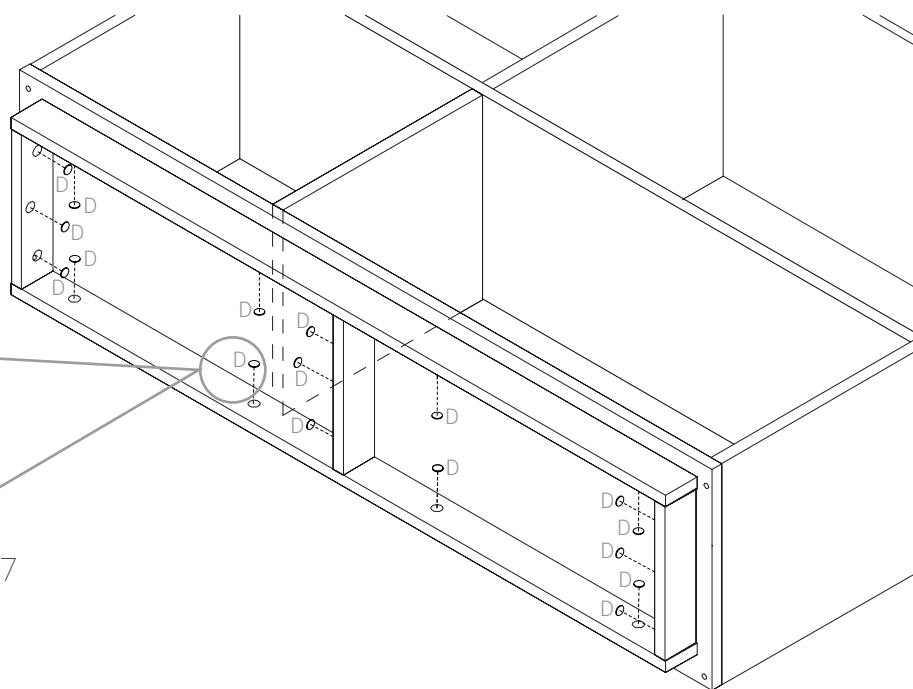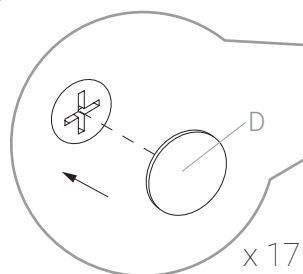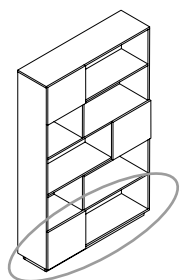



PASO 8 / STEP 8

I1 x 6

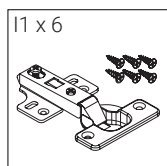


PASO 8.1 / STEP 8.1

13 x 3

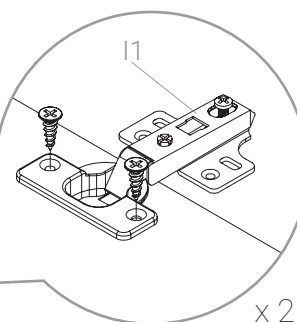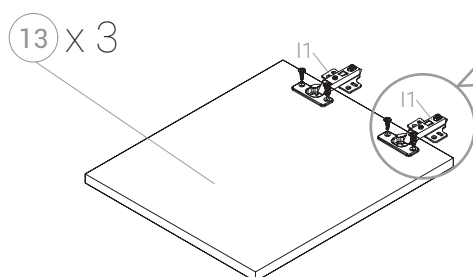


x 2



PASO 8.2 / STEP 8.2

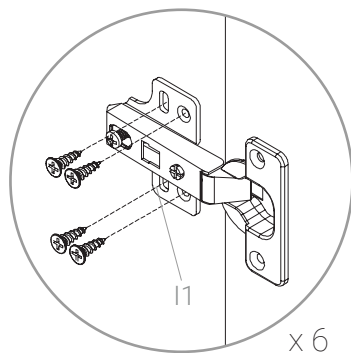


x 6

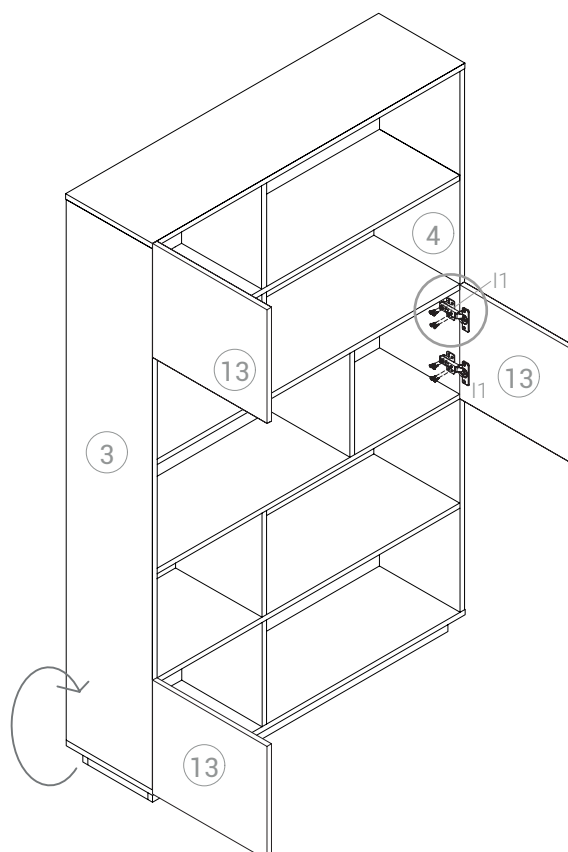


PASO 8.3 / STEP 8.3

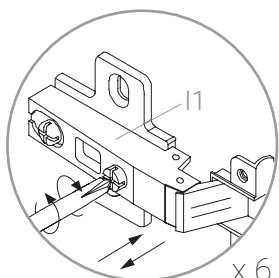


x 6

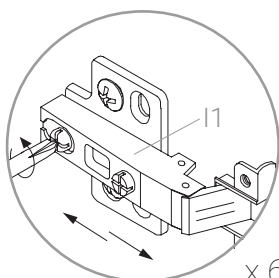


x 6

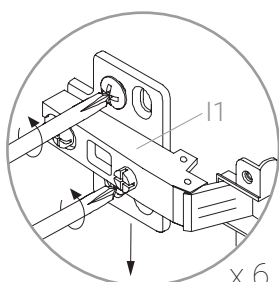



x 6

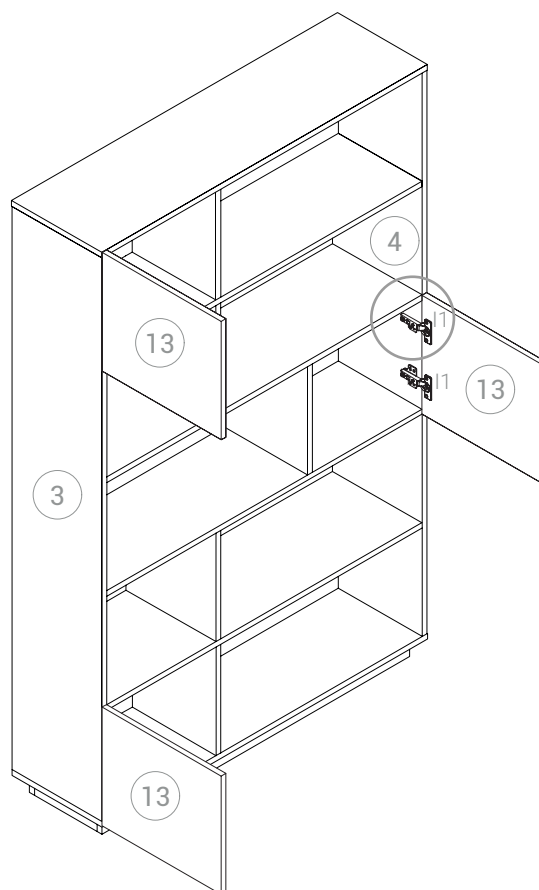


PASO 9 / STEP 9

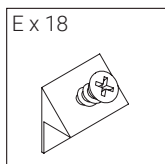

E x 18

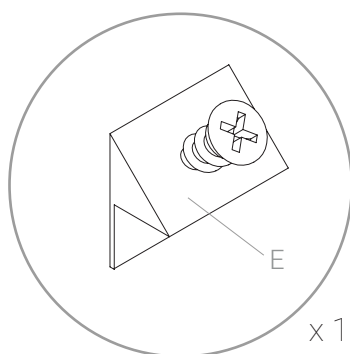


x 18


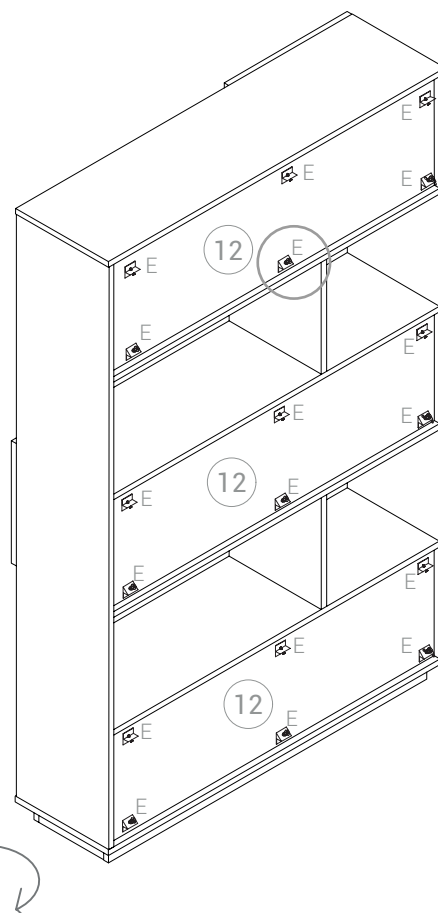


ANCLAJE A PARED / WALL FITTING


PASO 10 / STEP 10

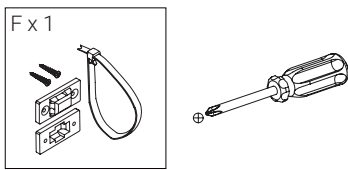

PASO 10.1 / STEP 10.1

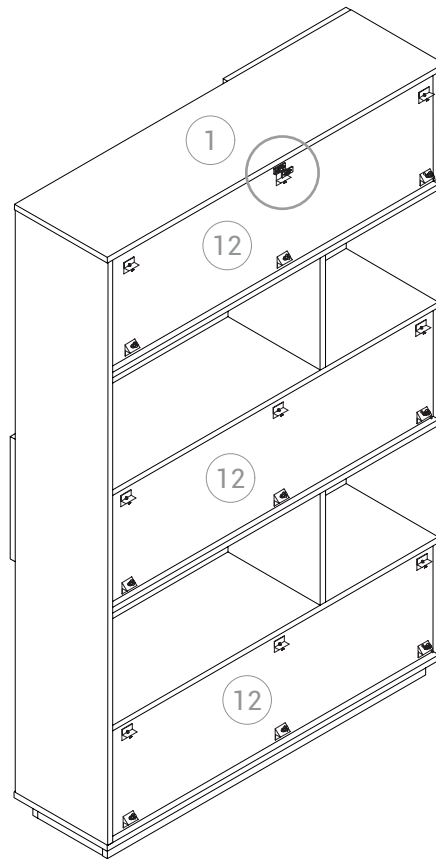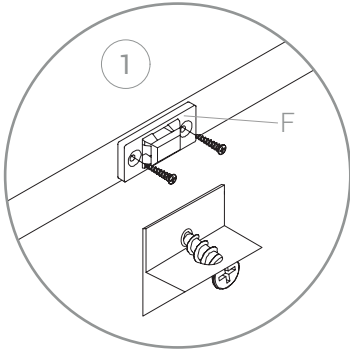

PASO 10.2 / STEP 10.2

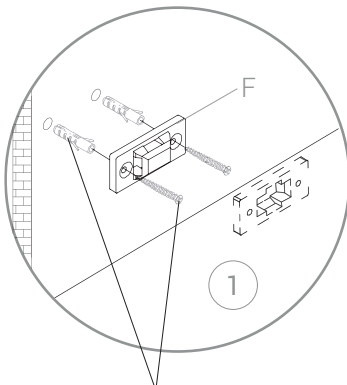

TORNILLERÍA A PARED NO INCLUIDA /
WALL SCREWS NOT INCLUDED

PASO 10.3 / STEP 10.3

