


KENAY

ARNE BUTACA /
ARNE ARMCHAIR

KAW-0006

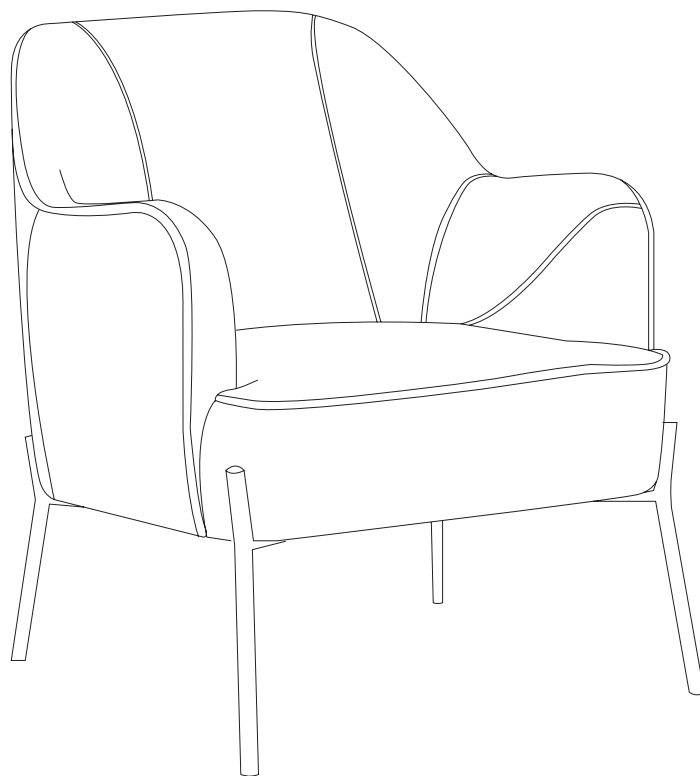


PIEZAS / PIECES

A x 8	B x 8	C x 1
		
M8 x 35 mm	M8 x 18 x 1 mm	

PASO 1 / STEP 1


A x 4	B x 4	C x 1
		
M8 x 35 mm	M8 x 18 x 1 mm	

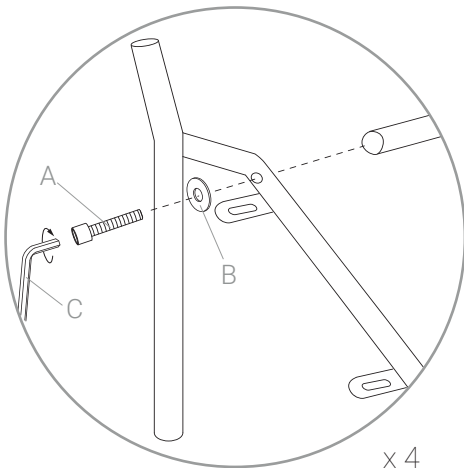

x 4


PASO 2 / STEP 2

A x 4	B x 4	C x 1
		
M8 x 35 mm	M8 x 18 mm	


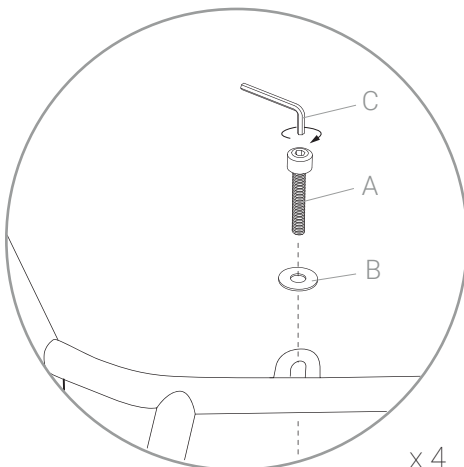


x 4

PARTES / PARTS

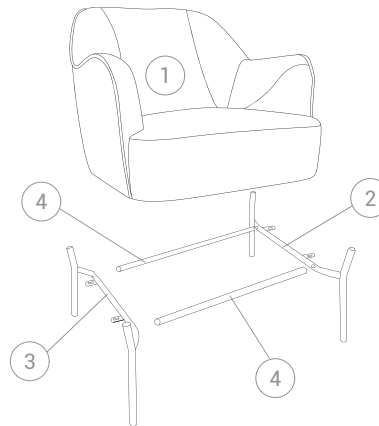

- 1 x 1 ud.
- 2 x 1 ud.
- 3 x 1 ud.
- 4 x 2 uds.

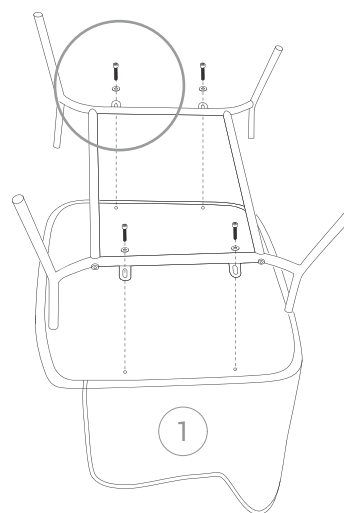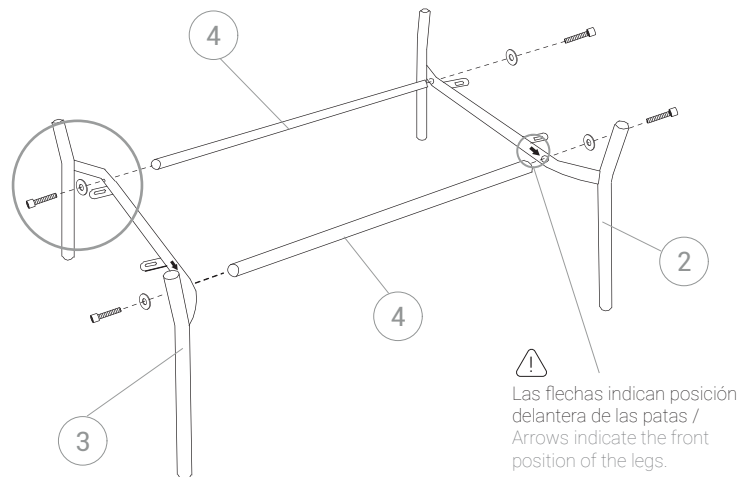

NOTA / NOTE:

Al finalizar el montaje, se recomienda sentarse para conseguir el ajuste óptimo de las patas. / At the end of the assembly, it is recommended to sit down in order to achieve the optimum adjustment of the legs.

