



KENAY

EMMET APARADOR 180
EMMET SIDEBORD 180


KY-826BU / KY-826GR

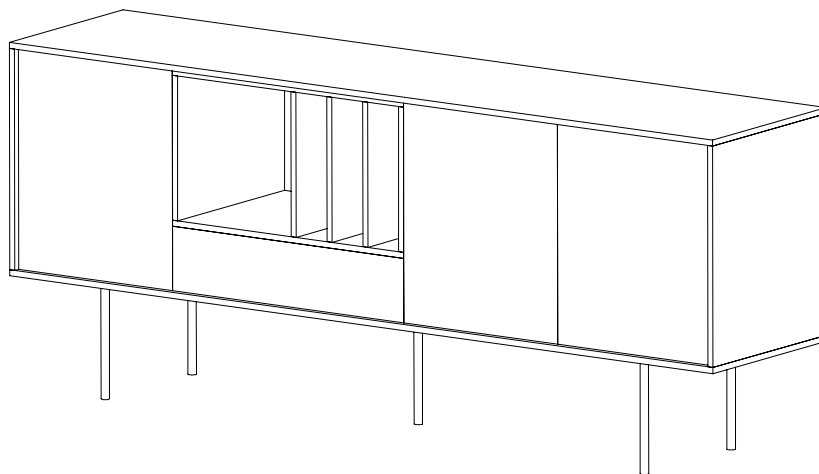


PIEZAS / PIECES

A x 4  M4	B x 8  M4 x 25 mm	C x 12  Ø3,5 x 30 mm
--	--	---

HERRAMIENTAS / TOOLS



PARTES / PARTS

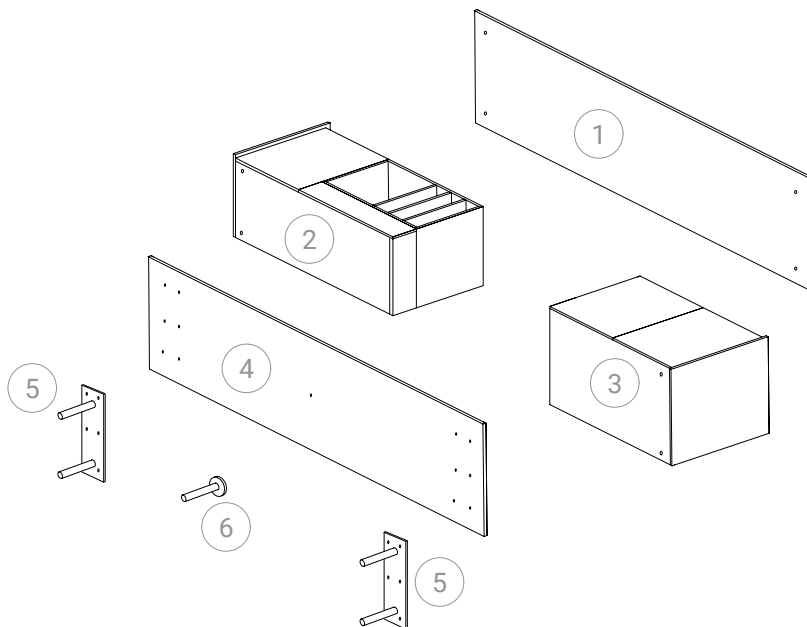

1 x 1 ud.

2 x 1 ud.


3 x 1 ud.

4 x 1 ud.



5 x 2 uds

6 x 1 ud

PASO 1 / STEP 1

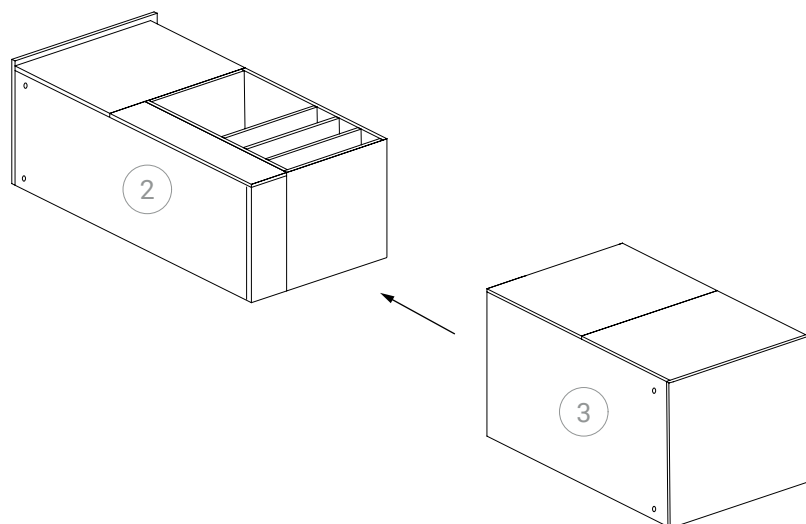


PASO 2 / STEP 2

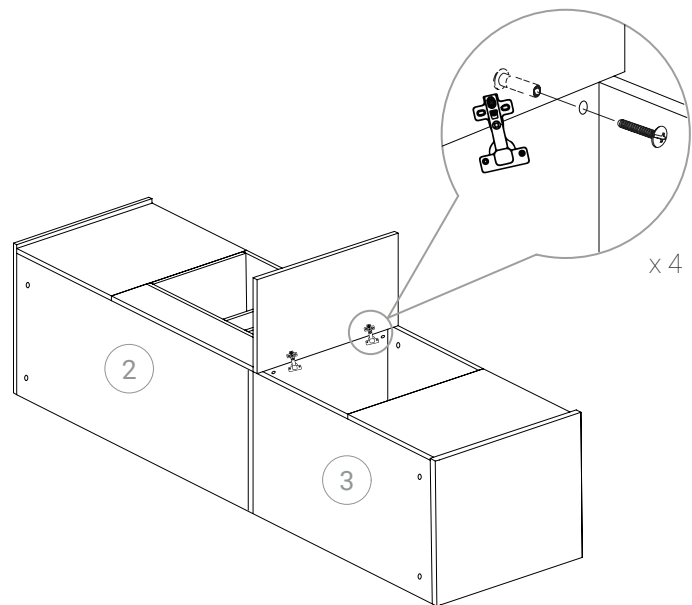
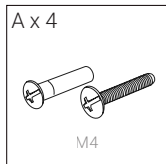


PASO 3 / STEP 3

PASO 3.1 / STEP 3.1

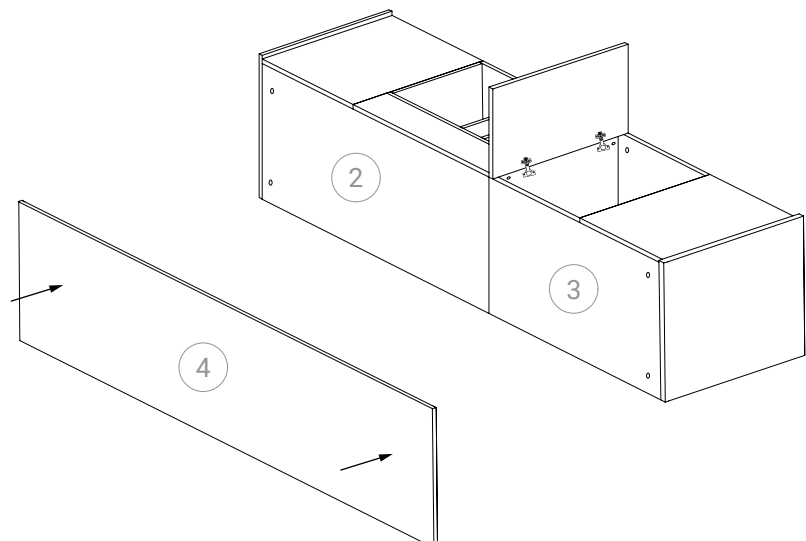

PASO 3.2 / STEP 3.2

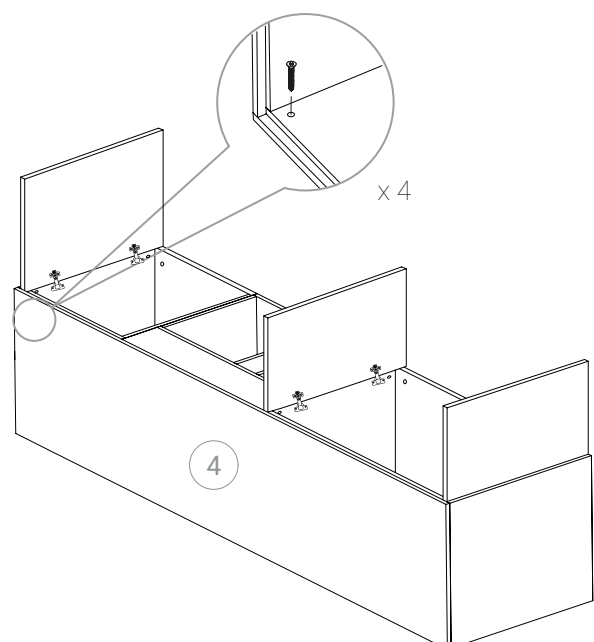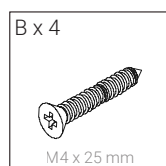


PASO 4 / STEP 4

C x 12




Ø3,5 x 30 mm

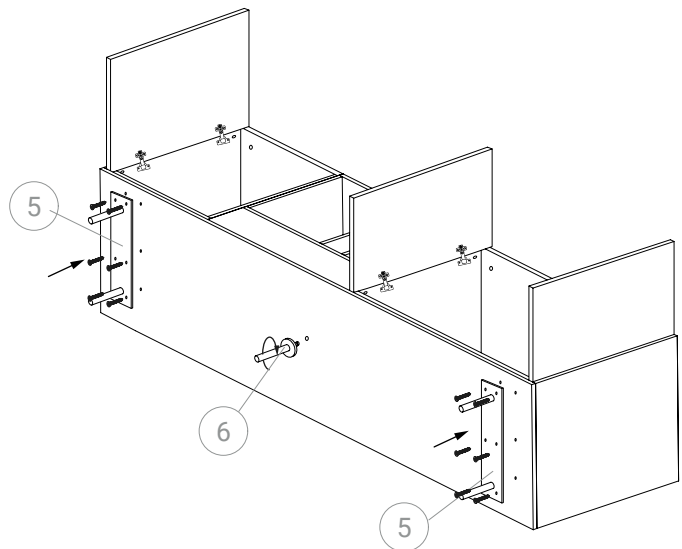


PASO 5 / STEP 5

PASO 5.1 / STEP 5.1


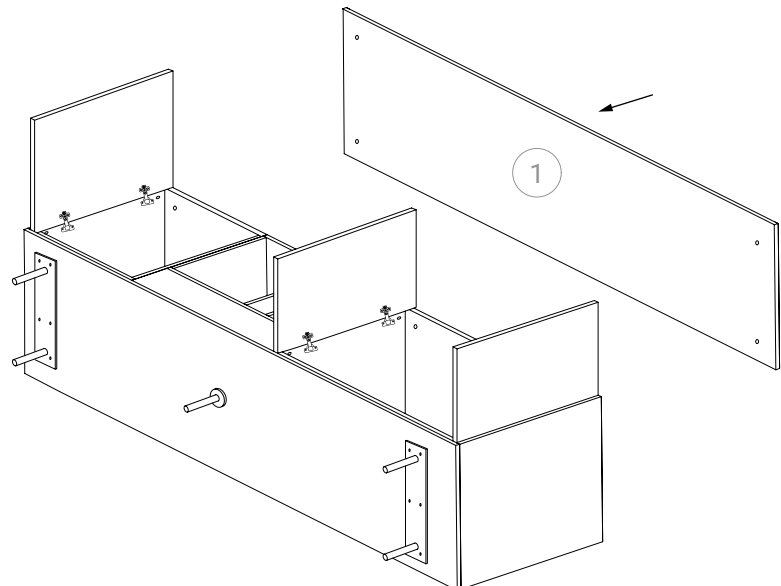


PASO 5.2 / STEP 5.2

B x 4




M4 x 25 mm

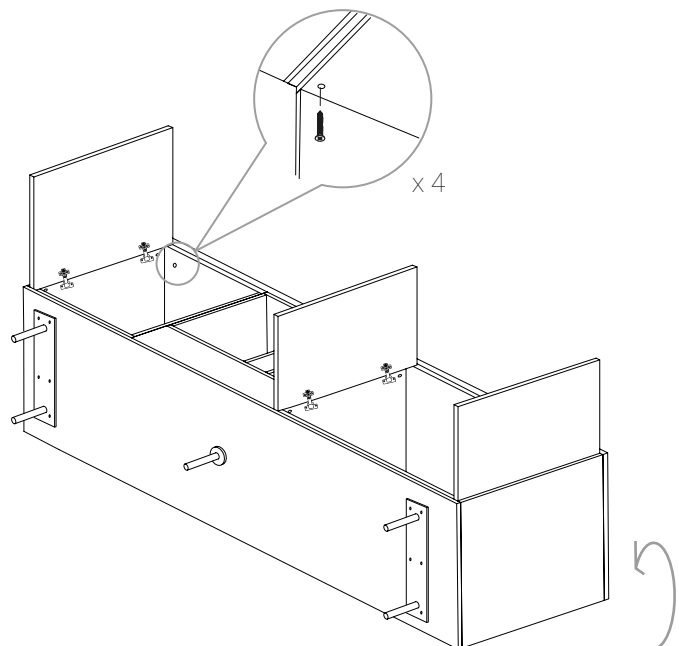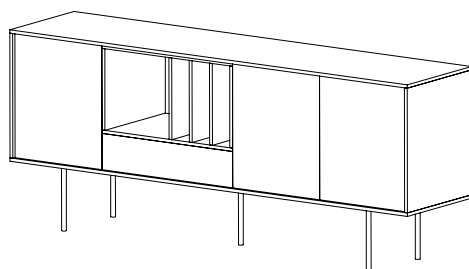


ANCLAJE A PARED / WALL FITTING

PASO 6 / STEP 6

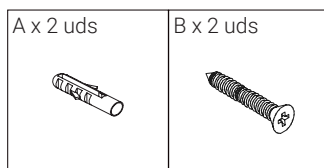


PASO 6.1 / STEP 6.1

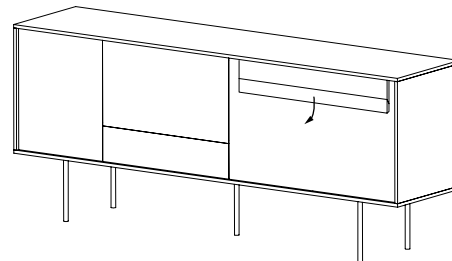


PASO 6.2 / STEP 6.2


Tomar medidas de la altura para colocar la cuña /
Take height measurements for wedge placement

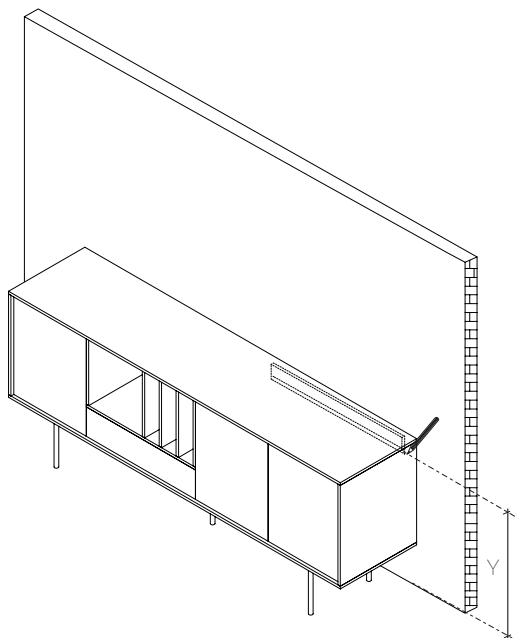


PASO 6.3 / STEP 6.3

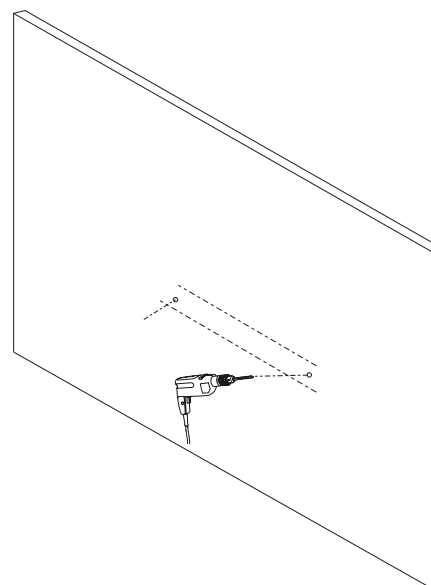

PASO 6.4 / STEP 6.4

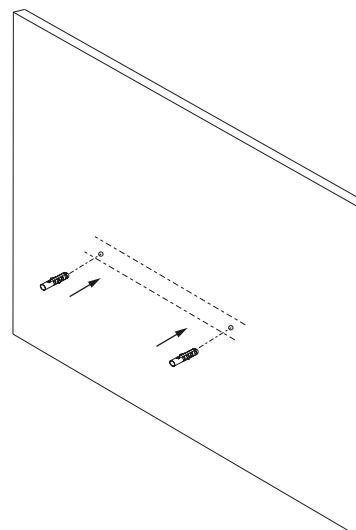

PASO 6.5 / STEP 6.5

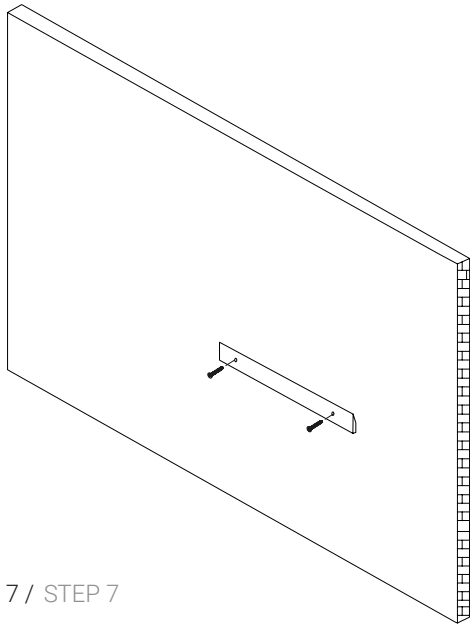

PASO 7 / STEP 7

