



# KENAY

OLDEN ZAPATERO /  
OLDEN SHOE CABINET


KAN-1465

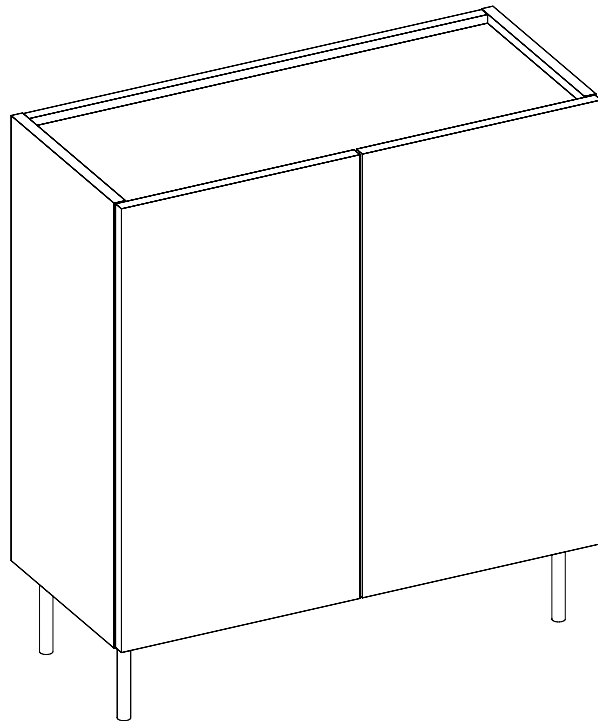




## PIEZAS / PIECES

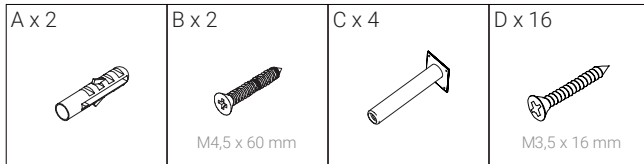

## HERRAMIENTAS / TOOLS





### PASO 1 / STEP 1

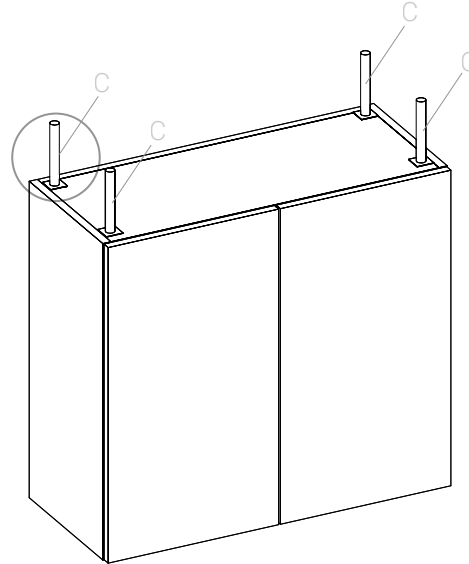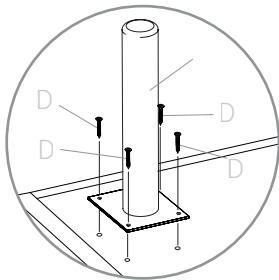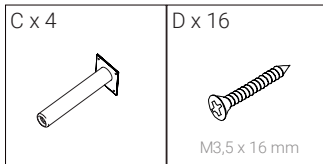

## ANCLAJE A PARED / WALL FITTING

### PASO 2 / STEP 2

#### PASO 2.1 / STEP 2.1

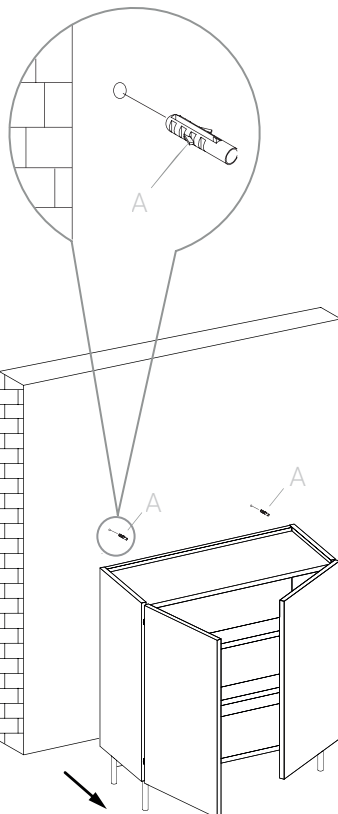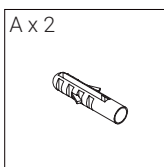

#### PASO 2.2 / STEP 2.2

